


SCHEMA ELETTRICO CUCINE TOP 700

DIS.N. CR0737120


DATA 02/07/09

MOD. -


DISEGNATO DA : NARDINI	MOD.	FIRMA	DATA	DESCRIZIONE MODIFICA	MOD.	FIRMA	DATA	DESCRIZIONE MODIFICA
	-	NARDINI	04.09.09	PRIMA EMISSIONE				
APPROVATO DA :	-							

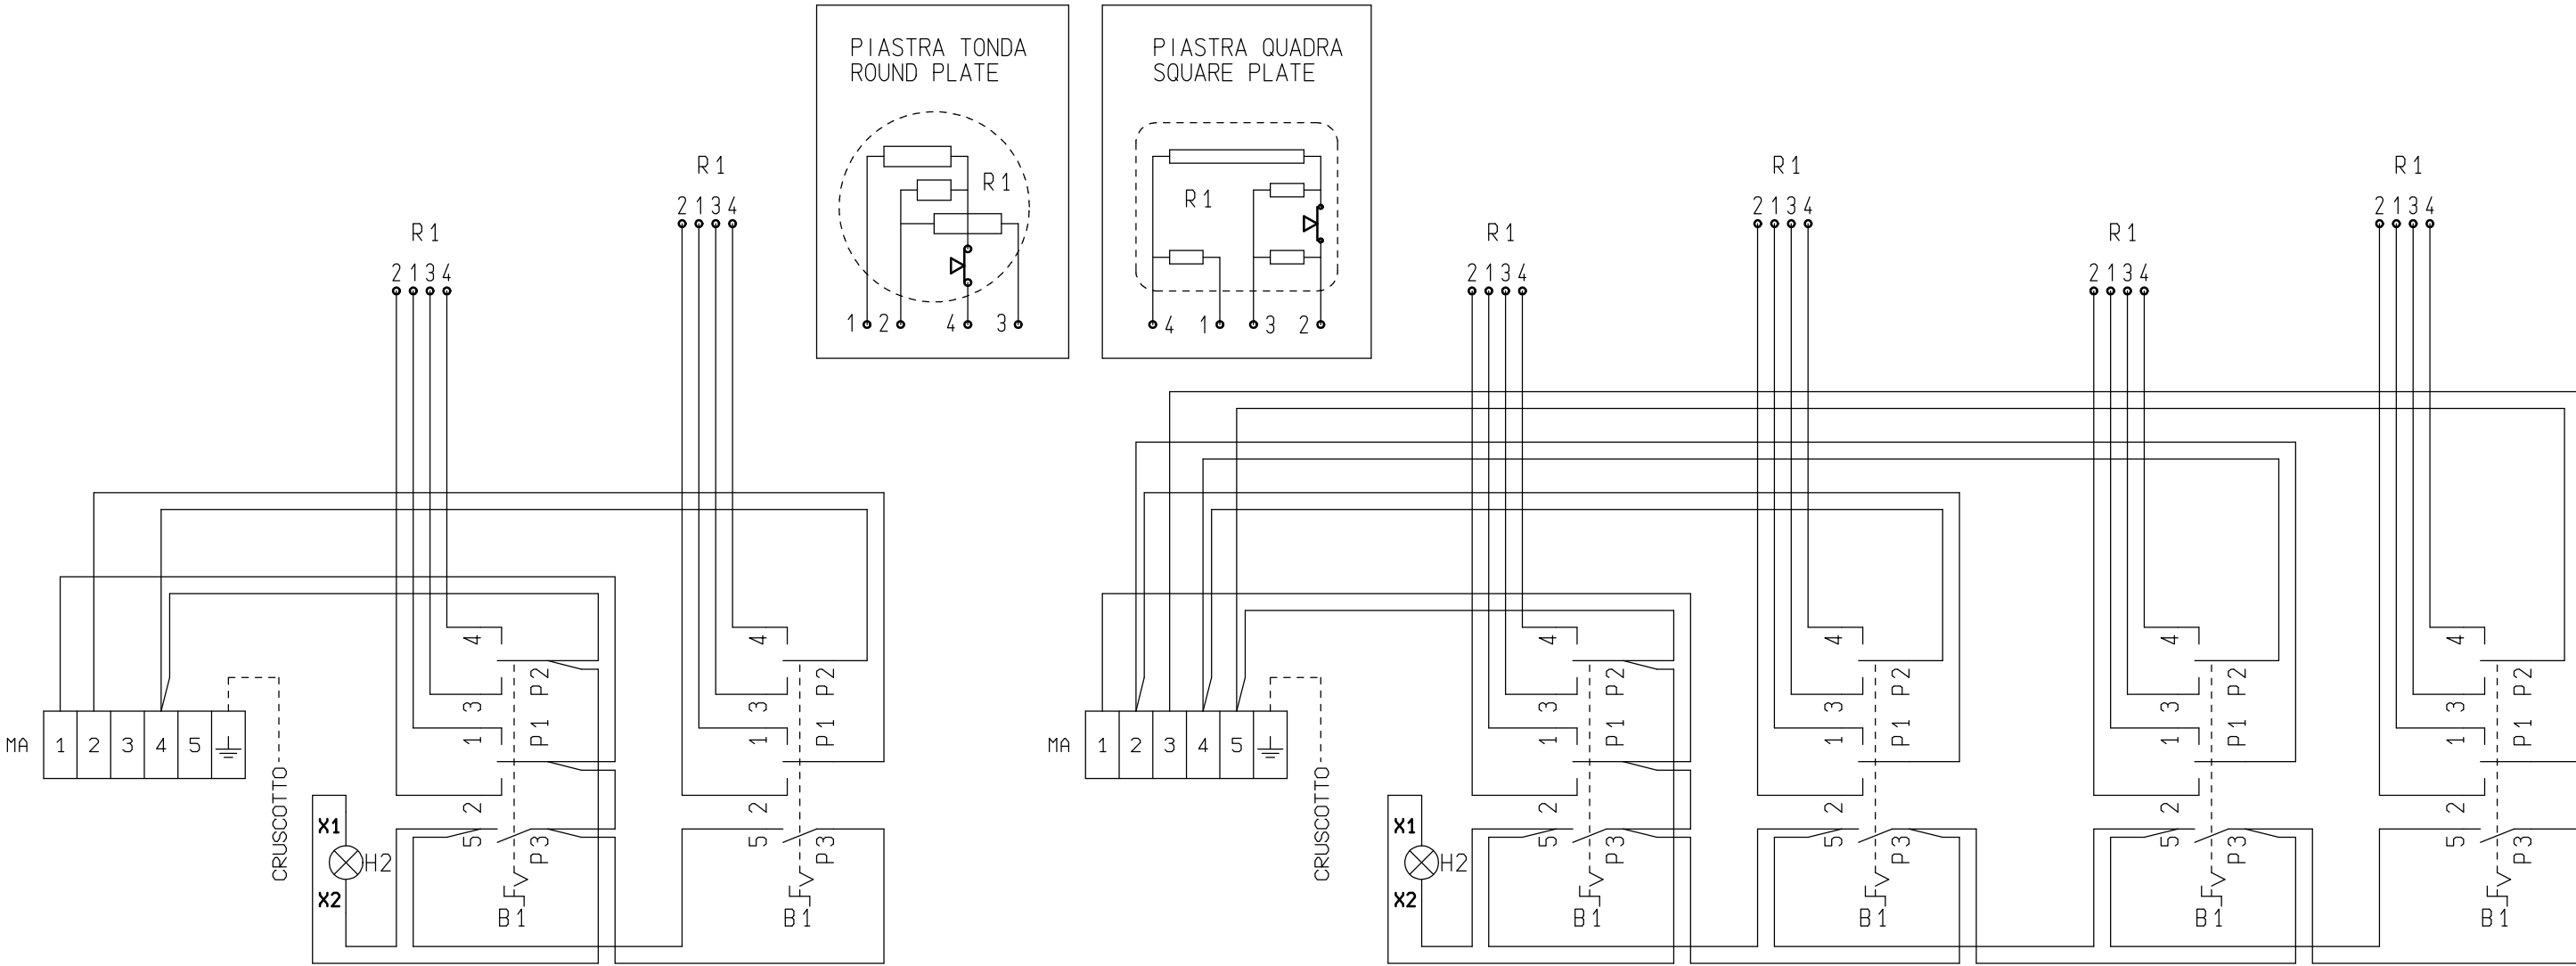


Mod	NC74EC NC74EQC	ECE72T ECE72TQ	ECE72A ECE72AQ	ECE72G ECE72GQ
P(KW)	5.2			
I(A)	11.3	19.6		22.6
U(V)	400V 3N~	230V 3~		230V~
f(Hz)	50/60			
Cable	5G1.5mm ²	4G2.5mm ²		3G2.5mm ²

 

L1 L2 L3 N
400VAC 3N

 


L1 L2 L3
230VAC 3

 


L1 N
230VAC

Mod	NC78EC NC78EQC	ECE74T ECE74TQ	ECE74A ECE74AQ	ECE74G ECE74GQ
P(KW)	10.4			
I(A)	22.6		29.9	
U(V)	400V 3N~		230V 3~	
f(Hz)	50/60			
Cable	5G2.5mm ²		4G4mm ²	

 

L1 L2 L3 N
400VAC 3N

 

L1 L2 L3
230VAC 3

B1	COMMUTATORE	COMMUTATEUR	CHANGE-OVER SWITCH	UMSCHALTER
H2	SPIA ARANCIO	LAMPE ORANGE	ORANGE PILOTLIGHT	ORANGE LAMPE
MA	MORSETTIERA ARRIVO LINEA	BORNES ARRIVEE LIGNE	TERMINAL BLOCK	ANSCHLUSSKLEMME
R1	PIASTRA ELETTRICA	PLAQUE ELECTRIQUE	ELECTRIC COOKING PLATE	ELEKTRO-KOCHPLATTE

P2	3		×			×	×	×
	4			×	×		×	×
P1	3		×					
	2			×	×	×	×	
	1		×					×
P3	5		×	×	×	×	×	×
POS	0	1	2	3	4	5	6	